

Cut hole as per template. Use 4 screws supplied to retain panel.

Connect the positive from battery master switch into the connector supplied with panel.

Connect negative from battery to negative stud or buss bar (not supplied with panel).

Connect positive from appliance to the empty terminal on selected switch and fit corresponding label (supplied in pack).


Fit negative from appliance to negative stud.

The fuse holders are supplied with 15A blade type fuses.


To replace blown fuses, flip back cover of fuse holder as per drawing* and pull out old fuse.

Push in new fuse and close cover (NOTE MAXIMUM FUSE RATING 20A)


TEMPLATE (TOP)

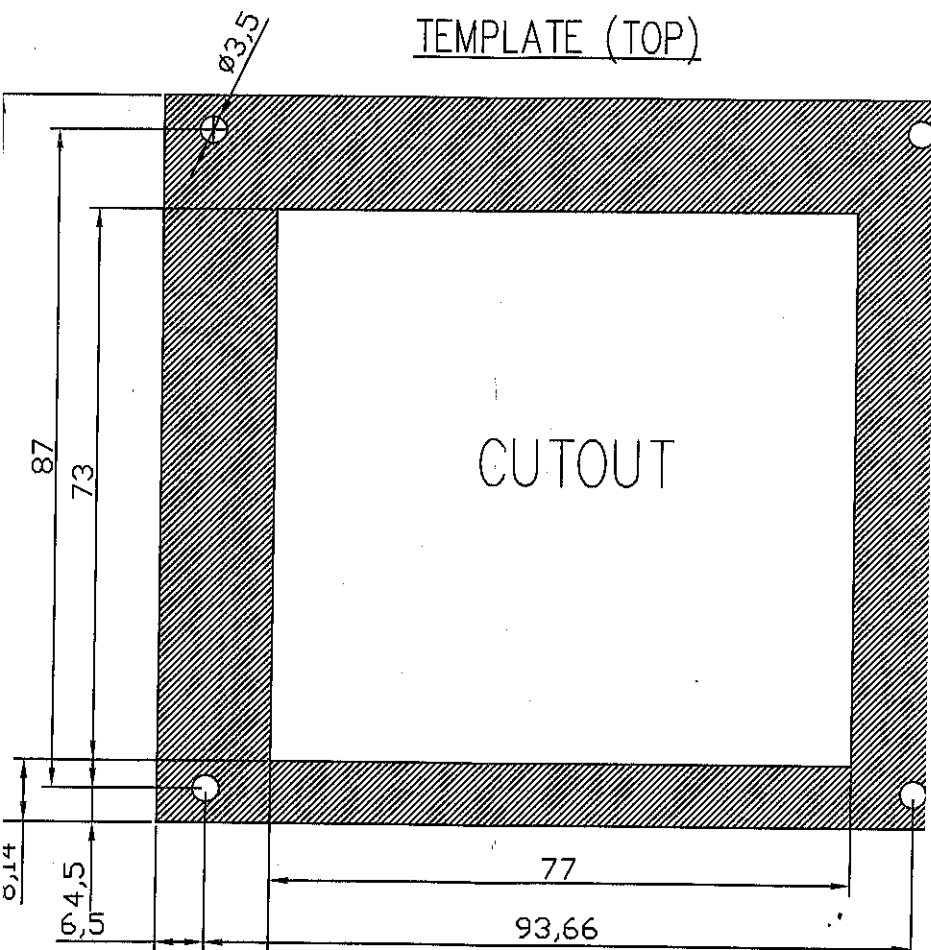

* REPLACING FUSE

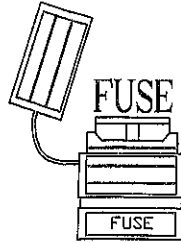

APPLIED
CONNECTOR

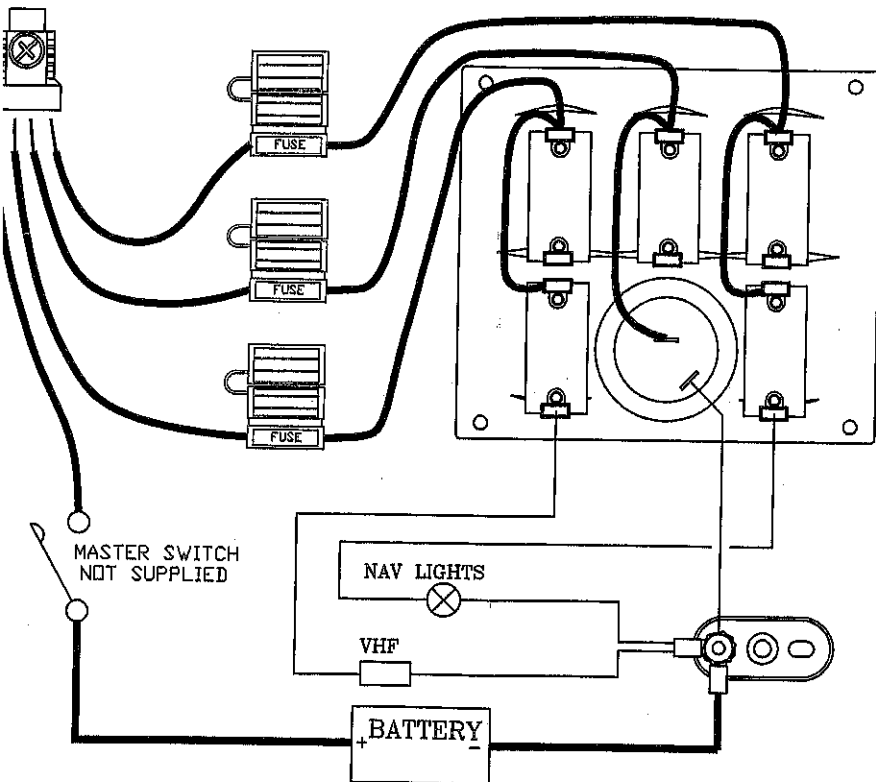

INST-5WPS'