

# Pure Sine Wave Inverter OWNER'S MANUAL

## *DC-AC Power Inverter*



### Special Feature:

- Fuse: Built-out
- 1.5 times rated power for 10s, 2 times for 2s
- Remote control (Optional)
- Power ON-OFF switch
- USB: 5V, 500mA (Optional)
- Two multiple controlled DC fans: Temperature and Load.
- Protection: LED Indicator & Audible Alarm.
- 12V or 24V or 48VDC input
- Input voltage range:  $-15\% \sim +25\%$
- Output voltage regulation:  $\pm 10\%$
- Output waveform: Pure Sine Wave
- Frequency:  $50\text{Hz} \pm 1\%$ ,  $60\text{Hz} \pm 1\%$ ,  $50\text{Hz}/60\text{Hz}$  (Optional) switch, switch by manual
- CE and RoHS Approved
- 18 months warranty

**Congratulations and thank you for purchasing our Pure Sine Wave Inverter. Carefully read, understand and comply with all instructions before use.**

# Sikkerhetsinformasjon – Inverter/omformer med modifisert sinuskurve

Vennligst les denne informasjonen før produktet tas i bruk.

## Ref. bruksanvisningens side 6 – omvendt polaritet

Pass på at du kobler kabler til riktig kontakt på omformeren.

Du kan koble omformeren til et batteri eller andre strømkilder

Den negative polen (-) og den positive polen (+) skal holdes isolert fra hverandre for å forhindre kortslutninger eller skader på produktet.

- a) Koble den sorte kablen til den sorte kontakten markert med (-) på baksiden av omformeren.  
Koble den andre enden av kablen til den negative (-) kontakten på batteriet.
- b) Koble den røde kablen til den røde kontakten markert med (+) på baksiden av omformeren.  
Koble den andre enden av kablen til den positive (+) kontakten på batteriet

Hvis du kobler kablene til feil kontakter, vil du reversere polariteten og skade omformeren.

## Ref. bruksanvisningens side 9 - Viktige sikkerhetsinstruksjoner

Feil installasjon eller feil bruk av omformeren kan føre til skader for brukeren eller farlige situasjoner.

- 1) Ikke forsøk å koble til noen annen strømkilde, inkludert en hvilken som helst vekselstrømkilde (AC).
- 2) Forsikre deg om at åpningen til ventilasjonsviften og ventilasjonshullene ikke blokkeres.
- 3) Unngå å trekke i eller strekke kablene. Bruk et fast grep når du kobler fra en strømkilde og når du kobler fra kablene.
- 4) For å unngå elektrisk støt, sørg for å koble omformeren fra den eksterne strømkilden før du setter i stikkkontakten.
- 5) Produktet er kun beregnet for innendørs bruk. Unngå at produktet eksponeres for eksterne varmekilder, direkte langvarig sollys, støv, etsende kjemikalier og fuktighet.
- 6) Det er normalt at omformeren blir varm under bruk. Unngå å berøre omformeren mens den er i bruk. Omformeren må ikke plasseres i direkte sollys eller nær materialer som er følsomme for varme.
- 7) Påse at omformeren utsettes for unødvige støt fra fall.
- 8) Påse at det ikke plasseres noe på omformeren.
- 9) Påse at kablene som følger med omformeren brukes som vist i bruksanvisningen. Bruk av kabler, kontakter eller tilbehør som ikke følger med produktet kan utgjøre fare eller fare for skade.
- 10) Ikke demonter omformeren. Omformeren er ikke beregnet for demontering. Forsøk på demontering kan utgjøre fare for skade eller elektrisk støt, inkludert eksponering for høyspenning. Hvis enheten ikke virker som tiltenkt og problemløsningen i brukerveiledningen ikke er til hjelp, vennligst kontakt teknisk kompetent personale eller forhandleren du kjøpte produktet av.

- 11) Ved rengjøring, påse at omformeren er slått av og koblet fra strømforsyning. Rengjør med tørr klut. Ikke bruk våt klut eller rengjøringsmiddel.
- 12) Ved behov for å sjekke eller skifte sikringer, påse at både AC og DC kabler er frakoblet. Det er ikke nok å bare slå av omformeren med ON/OFF knappen for å fjerne faren for elektrisk støt.
- 13) Hold barn på avstand fra omformeren.

Importør:

Ahoy Norge AS  
Hangarveien 21b  
3241 Sandefjord  
Norge  
Telefon: 359 44000

# Table of contents


<b>1. Introduction.....</b>	<b>3</b>
<b>1.1 What's an inverter.....</b>	<b>3</b>
<b>1.2 Pure Sine Wave Inverter.....</b>	<b>3</b>
<b>2. Main Components.....</b>	<b>3-6</b>
<b>2.1 Front panel.....</b>	<b>5</b>
<b>2.2 Rear panel.....</b>	<b>6</b>
<b>3. How to Use Inverter.....</b>	<b>6</b>
<b>3.1 Load consideration .....</b>	<b>6</b>
<b>3.2 Configuring the Battery Bank .....</b>	<b>7</b>
<b>3.3 Battery wiring examples.....</b>	<b>8</b>
<b>3.4 Placement of the inverter.....</b>	<b>8</b>
<b>3.5 Mounting position of the inverter.....</b>	<b>9</b>
<b>3.6 Getting Connected .....</b>	<b>9</b>
<b>4. Important Safety Instructions.....</b>	<b>9</b>
<b>5. Protection Feature.....</b>	<b>10</b>
<b>6. Troubleshooting Reference.....</b>	<b>10</b>
<b>7. Main Specifications.....</b>	<b>13</b>
<b>8. Maintenance.....</b>	<b>14</b>
<b>9. Warranty.....</b>	<b>14</b>
<b>Appendix I : Remote Control Switch .....</b>	<b>14</b>
<b>Appendix II : Recommend.....</b>	<b>15</b>

# 1. INTRODUCTION

## 1.1 What is an Inverter?

Power inverter is an electronic device that convert DC(Direct Current) battery power to standard AC (Alternating Current) power. DC is the power that is produced by battery while AC is the standard power needed to run electrical equipment. A power inverter does the opposite of a rectifier and is used in places and situations where AC power is not available.

## 1.2 Pure Sine Wave Inverter

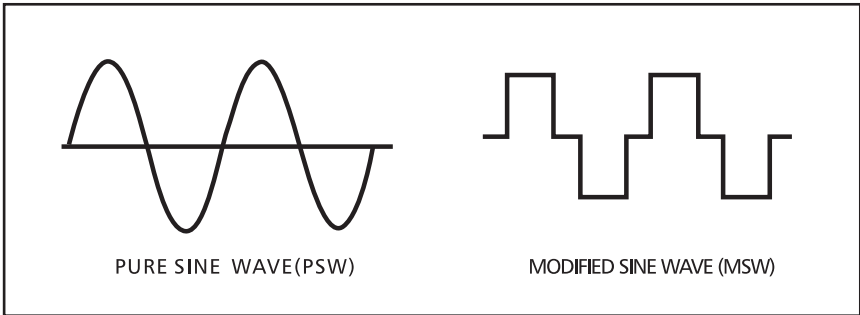


If you want to run your equipment exactly to the manufacturer’s specifications, choose a pure sine wave inverter. With pure sine wave, motor loads start easier and run cooler. Some equipment only operate properly with pure sine wave inverter, such as laser printers, variable speed motors and digital clocks.

# 2. MAIN COMPONENTS

## 2.1 Front Panel

The front panel view shows the inverter’s ON/OFF Switch, AC Output Receptacle, LED Indicator Light, Vent Outlet, Remote Control port ,Chassis Ground,USB.

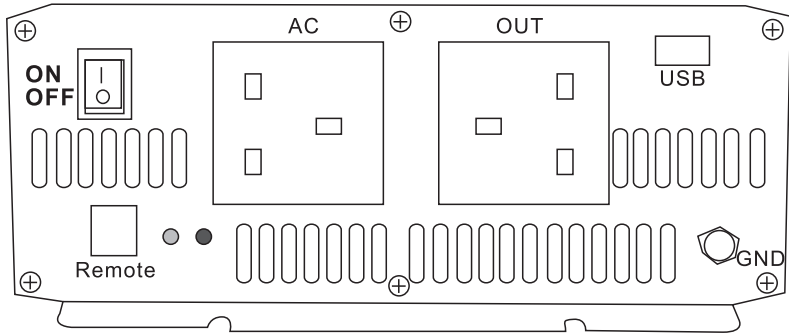

**A. ON/OFF Switch.**

This switch controls ON/OFF operation of the inverter.

**B.LED Indicator Light:** Fault, Inverter.

- a) Fault: Turns Red shows fault, reference to Troubleshooting
- b) Inverter: This light will illuminate continuously whenever connected equipment is receiving battery-supplied, inverted AC power.

**C. AC Output Receptacle:** For application demands of different geographic areas all over the world, there are many different kinds of optional AC receptacle to choose from.



A  
USA



B  
AUSTRALIA



C  
UNIVERSAL



D  
U.K



E  
FRANCE



F  
GERMANY

**D. Vent Outlet.**

To decrease the temperature of the inverter.

**E. Chassis Ground**

Properly grounds the Inverter to vehicle grounding system or to earth ground.

**F. Remote Switch Port(Optional):**

Use to connect the remote ON/OFF switch via a communication cable. Refer to Appendix


**G. Hardwire Terminal Block(2500W to 6000W):**

Note: When the load current is >15A, must use output terminal connection which can be found inside the AC output panel of the inverter.



Ensure the inverter is turned off if connecting the Hard Wire option.

Seek professional assistance if you are unfamiliar with electrical wiring.

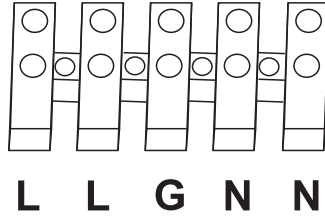


**H. USB Port(Optional):**

Powers and charges USB-enabled devices.

**2.2 Rear Panel**

The rear panel view shows the inverter’s Cooling fan, DC Battery Terminals, Fuse.

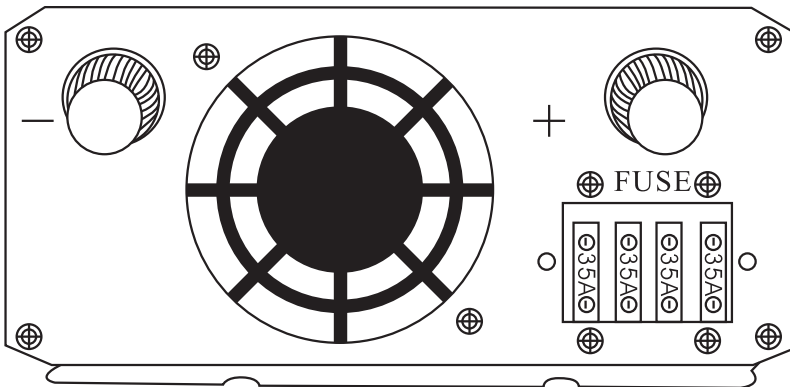

**A. Temperature and Load controlled Multi-Speed Cooling Fan**

Quiet, efficient fan prolongs equipment service life.

- 1. Load<40% or inner temperature less than 30℃, fan don't run
  - 2. 40%≤Load<60%, the fan's rotational speed is 40%
  - 3. 60%≤Load<80%, the fan's rotational speed is 60%
  - 4. 80%≤Load<100%, the fan's rotational speed is 80%
  - 5. 100%≤Load, the fan's rotational speed is 100%
- Once Inner temperature is more than 45℃, the fan's rotational speed is 100%.

**B. DC Battery Terminals**

Connect the inverter to battery or other power sources.


Negative (-) and Positive (+) DC terminals should be kept insulated to protect from accidental short circuits.

- a) Connect the black cable to the black post marked (-) on the back of the inverter. Connect the other end to the negative terminal on the battery.
- b) Connect the red cable to the red post marked (+) on the back of the inverter. Connect the other end to the positive terminal on the battery.

If you connect the cables to the incorrect terminals, you will reverse the polarity and damage the inverter.

## **⚠️ PROHIBITED REVERSE POLARITY.**

DAMAGE CAUSED BY REVERSE POLARITY WILL NOT BE COVERED BY WARRANTY.

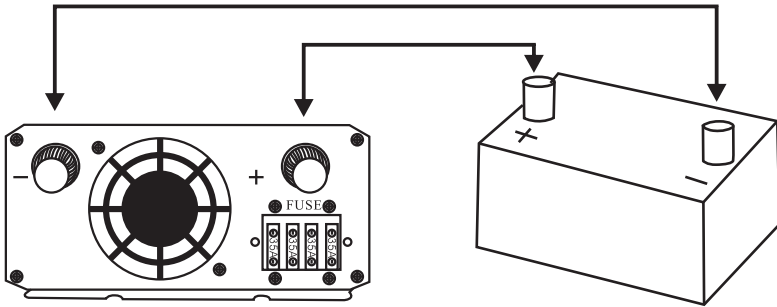

### **C. Fuse**

Fuse was built-out is a very good design as you can very easy to change the fuse outside the inverter if your inverter fuse was blown.

## **3.HOW TO USE INVERTER**

### **3.1 Load consideration**

When an appliance with a motor starts, it requires a momentary surge of power. This surge of power is the “starting load” or “peak load”. Once started, the appliance requires less power to continue to operate. This is known as the “continuous load”. It is important to know the starting loads and the continuous loads of the appliances that are to be powered by the inverter.

Appliance power is rated in watts. This information is usually stamped or printed on most appliances and equipment. In some cases, a tool will be rated in amperes. To convert from amps to watts, multiply:



Amps x AC voltage = Watts

This formula yields an approximation of the continuous wattage load of that appliance.

The startup load of an appliance is a major factor of whether this inverter can power it.

Startup load is momentary. With many appliances, it is approximately twice the continuous load, but some appliance startup loads can be as high as eight times the continuous load.

To determine if an appliance or tool will operate with this inverter, run a test. This inverter will automatically shut down in the event of an output overload, so there is no danger of damaging either the inverter or the equipment. When lit, a red LED indicator and Buzzer signals a fault.

### 3.2 Configuring the Battery Bank

To determine the minimum battery ampere-hour rating that you will need to operate appliances from the inverter and any DC appliances powered by the battery bank, follow these steps:

1. List the maximum continuous wattage that the inverter has to supply.
2. Estimate the number of hours the appliances will be in use between battery recharges. This will vary depending on appliances. For example, a typical home-use coffee maker draws 500 watts during its brew time of 5 minutes. It maintains the temperature of the pot, requiring 100 watts. Typical use of a microwave oven is only for a few minutes. Some longer operating time appliances are lamps, TVs, computers and refrigerator/freezers.


Determine the total watt-hours of energy needed. This is done by multiplying average power consumption in watts by hours of run time. For example: 500 watts for 10 hours = 5000 watt hours. To get an estimate of the maximum current (in amps) that a battery bank must be capable of delivering to the inverter, divide the load watts by ten. For example a 500 watt appliance load will need 50 amps at 12 volts DC. Using the 500 watts (or 50 amps) for 10 hours example as above, then 50 amps is needed for 10 hours. This provides us with the basic amp-hours (AH) of battery that is required. Ten hours at 50 amps equals 500 amp-hours (AH). There are additional factors that determine actual run time. These include:

- AC appliance load and time in use (basic AH).
- Cable gauge and length (cable losses).
- Charge level of the batteries (between use, chargers have to be able to fully charge the batteries).
- Temperature of the batteries (colder batteries provide fewer amps).
- Age and condition of the batteries (older batteries lose AH capacity).
- Compliance with turning off unnecessary AC loads.
- Use of DC appliances and compliance with turning off unnecessary DC loads.

### 3.3 Battery Wiring Examples

In renewable energy systems, batteries are connected to each other in one of three ways:

- Series (voltage increases, amperage stays the same as a single battery)
- Parallel (voltage stays the same as a single battery, amperage increases)
- Series/Parallel (both voltage and amperage increase)

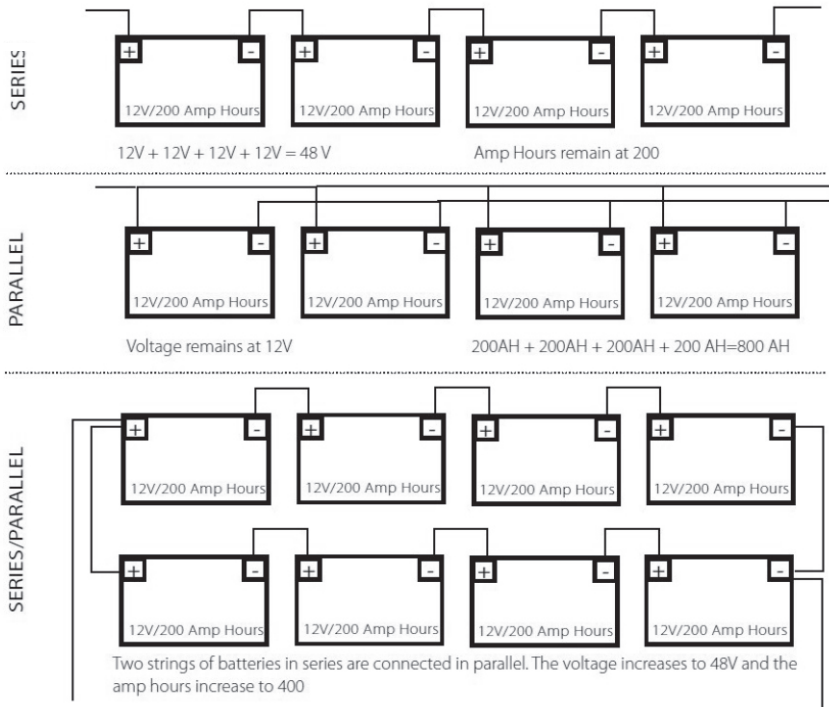

### 3.4 Placement of inverter

The location where to install inverter must be:

- Dry:** Do not allow water to drip or splash onto it.
- Cool:** Ambient air temperature should be between  $0^{\circ}C$  and  $40^{\circ}C$  - ideally between  $15^{\circ}C$  and  $25^{\circ}C$ . Do not place the inverter on or near a heating vent or any piece of equipment which is generating heat above room temperature. Do not place the inverter in direct sunlight unnecessarily.
- Ventilated:** Allow at least one inch of clearance around the unit for air flow. Do not place items on or over the inverter during operation. Make sure that air is allowed to circulate freely around the unit. A fan is helpful in the case where the inverter is operating at maximum.
- Safe:** Do not install the inverter in the same compartment as the batteries or in any compartment where flammable liquids or fumes may be or may become present.
- Dust:** Do not install the inverter in a dusty environments. The dust can be inhaled into the unit when the cooling fan is working.
- Close to batteries:** Avoid excessive cable lengths. Do not install the inverter in the same

compartment as batteries.

### **3.5 Mounting position of the inverter**

The inverter may be mounted horizontally on the top of a horizontal surface or under a horizontal surface. The inverter may be mounted on a vertical surface only horizontally.

### **3.6 Getting Connected**

Follow the connection sequence described below.

**Step 1** Ensure that the ON/OFF switch on the Inverter is in the OFF position. If the power source is a DC power supply, switch it OFF as well.

**Step 2** Connect inverter to power source.

Connect the DC cables to the DC battery terminals on the rear panel of the inverter. The red terminal is positive (+) and the black terminal is negative (-).

**Step 3** Connect inverter to appliances.

Make sure the load power within the rated power of inverter and the start power should not exceed the peak power of the inverter. When having the inverter connected with appliances and a power supply, switch on the inverter and appliances. If you are operating several loads from the power inverter, turn them on separately after the inverter has been turned on. This will ensure that the power inverter does not have to deliver the starting currents for all the loads at once.

## **4.IMPORTANT SAFETY INSTRUCTIONS**

Incorrect installation and misuse of the inverter may result in danger to the user or hazardous conditions.

1. Do not attempt to connect the any other power source, including any AC power source .
2. Make sure the opening to the ventilation fan and vent holes are not blocked.
3. Avoid pulling on the cords and cables. Always grip plugs firmly when unplugging from power source and when disconnecting cables.
4. To avoid electrical hazard, be sure to unplug the inverter from its external power source before inserting the AC plug.
5. For indoor use only. Avoid exposure to external heat sources; direct, prolonged sunlight; dust; corrosive chemicals; and moisture.
6. It is normal for inverters to become warm during use. Avoid touching the device during use. Avoid placing in direct sunlight or near heat-sensitive materials.
7. Do not drop or subject the inverter to undue shock.
8. Do not place anything on top of the inverter.
9. Always with the supplied cables and connectors as shown. Use of cables, connectors, or accessories not supplied with this product constitutes misuse and may result in injury or damage.
10. Do not attempt to service or disassemble. The unit is not user-serviceable. Attempting to disassemble or service the unit can result in electrical hazard, including death from exposure to high voltage. If you experience problems with the unit, discontinue use and Contact Technician.

11. When cleaning the inverter, please switch off power(unplug the inverter).Carefully clean with dry cloth. Do not use wet cloth or cleanser.
12. Disconnect all AC and DC side connections before working on any circuits associated with the inverter. Turning the ON/OFF switch on the inverter to off position may not entirely remove dangerous voltage.
13. Keep away from children.

## 5. PROTECTION FEATURE

Inverter is equipped with numerous protection features to ensure safe operation.

### **Input Low Voltage Protection:**

A: When battery voltage is below  $10.8V \pm 0.2V$ (for 12V input inverter)/ $21.6V \pm 0.4V$ (for 24V input inverter)/  $43.2V \pm 0.8V$ (for 48V input inverter), **Buzzer sound 2times and red light blink 2 times every eight seconds**, which indicates DC power supply voltage is descending and batteries need to recharge.

B: When input voltage is below  $10.2V \pm 0.2V$ (for 12V input inverter)/ $20.4V \pm 0.4V$ (for 24V input inverter)/  $40.8V \pm 0.8V$ (for 48V input inverter), **Buzzer sound 3 times and red light blink 3times every eight seconds**, AC output will be automatically shut off.

### **Input Over Voltage Protection**

When input voltage reach  $15.5V \pm 0.2V$  (for 12V input inverter)/ $31V \pm 0.4V$  (for 24V input inverter)/ $62V \pm 0.8V$  (for 48V input inverter), **Buzzer sound 4times and red light blink 4 times every eight seconds**, the AC output will be shut off automatically.

### **Short Circuit Protection**

When short circuits occur, **red light constantly flashing**, output will be shut off.

### **Overload Protection**

When overloads occur, **red light constantly flashing**, output will be shut off.

### **Reverse polarity protection:Fuse or MOSfet**

a. via Fuse: When battery terminals are reverse connected, fuse will be burned to protect appliances.

b.via MOSfet(Optional): When battery terminals are reverse connected, the inverter won't work unit correct connect.

### **Over Temperature Protection**

When heat sink temperature exceeds  $45^{\circ}C$ , the inner cooling fan will automatically turn on to cool the inverter; when less than  $30^{\circ}C$ ,the inner cooling fan will automatically shut off.

When inner temperature exceeds  $75^{\circ}C$ , **Buzzer sound 5 times and red light blink 5times every eight seconds**, AC output will automatically shut off.

## 6.TROUBLESHOOTING REFERENCE

### **Acoustics buzzer alarms**

When applying the inverter to acoustics devices, some inferior acoustics devices will buzz, this is because the output wave from the inverter is modified sine wave inverter.

## TV Interference

You can get minimum interference through use of a filter. On some occasions, when the interference of every weak signals becomes too obvious, you can try the following:

- Place the inverter far from the TV and TV antenna.
- Try to change the direction of TV signals cable and TV antenna to reduce the interference to minimum.
- Use screen cable antenna of highly quality.

SYMPTOM	POSSIBLE CAUSE	SOLUTIONS
ON/OFF switch is switched on, LED does not light. Buzzer is off. There is no AC voltage	There is no voltage at the DC input Terminals	<ol style="list-style-type: none"> <li>1. Check the continuity of the battery input circuit</li> <li>2. Check that the battery fuse is intact. Replace if blown</li> <li>3. Check that all connections in the battery input circuit are tight</li> </ol>
	Polarity of the input voltage has been reversed that has blown the DC side fuses. <b>( Note: Reverse polarity may cause permanent damage)</b>	Correct the polarity of the input connections and replace the fuse.  If the unit does not work after replacing the fuse, the unit has been permanently damaged  <b>Call Technical Support</b>
Buzzer alarm is sounded 1 time. There is no AC voltage.	<ol style="list-style-type: none"> <li>1.Loose AC output connections.</li> <li>2.Short circuit of AC Output wiring.</li> </ol>	<ol style="list-style-type: none"> <li>1.Tighten AC output connections</li> <li>2.Check AC wiring for short circuit.</li> </ol>
<b>Buzzer sound 2times and red light blink 2 times every eight seconds</b>	Voltage at the DC input terminals reads below $10.8 \pm 0.2\text{VDC}$ (12V version), $21.6 \pm 0.4\text{VDC}$ (24V version), $43.2 \pm 0.8\text{VDC}$ (48V version),	<ol style="list-style-type: none"> <li>1.Check that the battery is fully charged. Recharge, if low</li> <li>2. Check that the battery cables are thick enough to carry the required current over the required length. Use thicker cables, if required</li> <li>3. Tighten connections of the battery input circuit</li> </ol>
<b>Buzzer sound 3times and red light blink 3 times every eight seconds</b>	Voltage at the DC input terminals reads below $10.2 \pm 0.2\text{VDC}$ (12V version), $20.4 \pm 0.4\text{VDC}$ (24V version), $40.8 \pm 0.8\text{VDC}$ (48v version),	<ol style="list-style-type: none"> <li>1.Check that the battery is fully charged. Recharge, if low</li> <li>2. Check that the battery cables are thick enough to carry the required current over the required length. Use thicker cables, if required</li> <li>3. Tighten connections of the battery input circuit.</li> </ol>

<p><b>Buzzer sound 4 times and red light blink 4 times every eight seconds</b></p>	<p>Higher input DC voltage than 15.5±0.2VDC(12V version), 31±0.4VDC(24V version), 62±0.8VDC(48V version)</p>	<ol style="list-style-type: none"> <li>1. Check that the voltage at the DC input terminals is more than 15.5V/31V/62V DC.</li> <li>2. Ensure that the maximum charging voltage of the battery charger / alternator / solar charge controller is below 15.5 V/31V/62V DC.</li> <li>3. Ensure that an un-regulated solar panel or wind turbine is not used to charge a battery</li> </ol>
<p><b>Buzzer sound 5 times and red light blink 5 times every eight seconds</b></p>	<p>System overheating</p>	<ol style="list-style-type: none"> <li>1. Check that the fan is working. If not, the fan / fan control circuit may be defective <b>Call Technical Support</b></li> <li>2. If the fan is working, check that the ventilation slots on the suction side and the openings on the discharge side of the fan are not obstructed</li> <li>3. If the fan is working and the openings are not obstructed, check that enough cool replacement air is available. Also check that the ambient air temperature is less than 45° C</li> <li>4. Reduce the load to reduce the heating effect</li> <li>5. After the cause of overheating is removed and the unit cools down, it will reset automatically</li> </ol>
<p>Red light constantly flashing</p>	<p>The loads is 200% higher than rated power.</p>	<ol style="list-style-type: none"> <li>1. Disconnect the load</li> <li>2. Reduce the load</li> <li>3. Cool the unit.</li> </ol>

Note: \* When  $190\% \leq \text{Load} \leq 200\%$ , limit current of AC output, that's to say AC Output Voltage decreasing, output shut down, delay 60s to restart automatically, once ten consecutive restart automatically, then you have to start the inverter by manual.

## 7.Specifications

Item		Model					
		KS300P	KS500P	KS600P	KS1000P	KS1500P	KS2000P
O U T P U T	Rated Power	300W	500W	600W	1000W	1500W	2000W
	Surge Power	120%<Load<150% Rated power for 10s,150%<Load<200% Rated power for 2s					
	AC Voltage	100V/110V/115V/120Vac or 220V/230V/240Vac					
		AC output regulation: 10%					
			Frequency:50Hz±1%,60Hz±1%,50/60Hz(Optional),switch by manual				
Waveform	Pure Sine Wave (THD<3%) at rated input voltage						
Protection	AC short circuit, Overload, Over temperature						
I N P U T	Bat. Voltage Range	10.8V-15.5V(12V version) 21.6V-31V(24V version) 43.2V-62V(48V version)					
	Efficiency	More than 85%					
	Protection	Battery Low Alarm, Battery Low Shutdown, Battery Polarity Reverse by Fuse					
	Battery Types	Open & sealed lead acid battery					
Dimension((L*W*H)cm)		13*15*5.2	21*15*7	21*15*7	31*15*7	29*22*9	32*22*9
Packing	PCS/CTN	12	6	6	4	2	2
	KGS/CTN	16.5	14.5	15.5	14.5	11.5	13.5
	MEAS(L*W*H)cm	44*42*32	42*34*45	42*34*45	45*34*42	45*31*38	45*31*38
Item		Model					
		KS2500P	KS3000P	KS4000P	KS5000P	KS600P	
O U T P U T	Rated Power	2500W	3000W	4000W	5000W	6000W	
	Surge Power	120%<Load<150% Rated power for 10s 150%<Load<200% Rated power for 2s					
	AC Voltage	100V/110V/115V/120Vac or 220V/230V/240Vac					
		AC output regulation: 10%					
			Frequency:50Hz±1%,60Hz±1%,50/60Hz(Optional),switch by manual				
Waveform	Pure Sine Wave (THD<3%) at rated input voltage						
Protection	AC short circuit, Overload, Over temperature						
I N P U T	Bat. Voltage Range	10.8V-15.5V(12V version) 21.6V-31V(24V version) 43.2V-62V(48V version)					
	Efficiency	More than 85%					
	Protection	Battery Low Alarm, Battery Low Shutdown, Battery Polarity Reverse by Fuse					
	Battery Types	Open & sealed lead acid battery					
Dimension((L*W*H)cm)		38*22*9	36*22*15	41*22*15	48*22*15	48*22*15	
Packing	PCS/CTN	2	1	1	1	1	
	KGS/CTN	15	10.5	11.5	14.5	15	
	MEAS(L*W*H)cm	50*32*36	56*35*26	56*35*26	67*34*24	67*34*24	
AC Out Receptacle		USA, UK, Germany, France, Australia, Brazil, Italy, South Africa, etc.					
Cooling		Temperature and Load Controlled					
Environment	Operating Temperature	-15 ° C to 40° C					
	Storage Temperature	-40 to 85° C					
	Relative Humidity	20% ~ 90% RH non-condensing					

Note: \*The specifications are subject to change without prior notice for further improvement of products.

## 8.Maintenance

To keep your inverter operating properly, there is very little maintenance required. You should clean the exterior periodically with a dry cloth to prevent accumulation of dust and dirt. At the same time, tighten the screws on the DC input terminals.

## 9.Warranty


We guarantee this product against defects in materials and workmanship for a period of 18 months from the date of retail purchase by end user.

This warranty will be considered void if the unit has been misused, altered, or accidentally damaged. We are not liable for anything that occurs as a result of the user's fault.

If the warranty period for your product has expired, if the unit was damaged by misuse or incorrect installation, if other conditions of the warranty have not been met, or if no dated proof of purchase is available, your unit may be serviced or replaced for a flat fee.

# Appendix

## Appendix I: Remote Control Switch

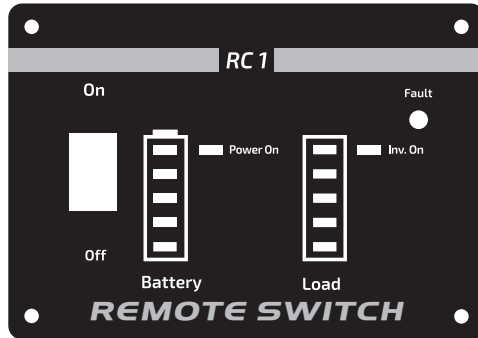

### ● Power ON/OFF Switch

Power ON/OFF switch is to turn the inverter on or off.

### ● Battery Capacity/Load Voltage indicator

**Load:** Slow flash, 1time per 1seconds. Show the approximate connected equipment load level.

Five Levels---20%,40%,60%,80%,100%.

**Battery:** Solid green. Show the battery residual capacity.

Five Levels---20%,40%,60%,80%,100%.

Transfer time(Between Load and battery ): 1time per 8seconds

### ● Standby/AC ON Indicator

**Standby:** Slow flash, load power is less than 5% of rated power or standby; conversely, solid green.

**AC ON:** Solid green. Inverter's output is continuous.

● **Fault:** Turns red show fault, refer to Troubleshooting of Inverter Manual.



## Connecting the Communications Cable

The communications cable is 3meters, 6-conductor cable (wired like a normal telephone-type cable). This cable is connected to the RJ11 jack on the rear of the remote control and to the REMOTE port located on the rear of the inverter.

### Notice:

**Inverter's ON/OFF Switch and Remote control's ON/OFF Switch is in parallel.**

**To use this remote control, must turn the inverter's ON/OFF Switch to OFF, and vice versa.**

## Appendix II:Recommend

For correct operation, the battery voltage should be between  $0.9 \times V_{nom}$  and  $1.29 \times V_{nom}$  where  $V_{nom}$  is 12V, 24V or 48V depending on model, and must be able to supply sufficient current to your inverter. The following table displays the recommended things (Battery Cable, Fuse, Battery Capacity) per inverter type :

Inverter type	Input Voltage	DC Battery Cable	Fuse	Battery Capacity
300W	12V	4mm <sup>2</sup> (1*Red/1*Black)	35A*1	≥50Ah
	24V	2.5mm <sup>2</sup> (1*Red/1*Black)	20A*1	≥25Ah
	48V	2.5mm <sup>2</sup> (1*Red/1*Black)	10A*1	≥12Ah
500W/600W	12V	6mm <sup>2</sup> (1*Red/1*Black)	35A*4	≥100Ah
	24V	4mm <sup>2</sup> (1*Red/1*Black)	20A*4	≥50Ah
	48V	2.5mm <sup>2</sup> (1*Red/1*Black)	10A*4	≥25Ah
1000W	12V	10mm <sup>2</sup> (1*Red/1*Black)	35A*4	≥160 Ah
	24V	6mm <sup>2</sup> (1*Red/1*Black)	20A*4	≥80Ah
	48V	4mm <sup>2</sup> (1*Red/1*Black)	10A*4	≥40Ah
1500W	12V	10mm <sup>2</sup> (2*Red/2*Black)	35A*6	≥250Ah
	24V	6mm <sup>2</sup> (2*Red/2*Black)	20A*6	≥125Ah
	48V	4mm <sup>2</sup> (2*Red/2*Black)	10A*6	≥60Ah
2000W	12V	16mm <sup>2</sup> (2*Red/2*Black)	35A*8	≥320Ah
	24V	10mm <sup>2</sup> (2*Red/2*Black)	20A*8	≥160Ah
	48V	6mm <sup>2</sup> (2*Red/2*Black)	10A*8	≥80Ah
2500W	12V	16mm <sup>2</sup> (2*Red/2*Black)	35A*10	≥400Ah
	24V	10mm <sup>2</sup> (2*Red/2*Black)	20A*10	≥200Ah
	48V	6mm <sup>2</sup> (2*Red/2*Black)	10A*10	≥100Ah
3000W	12V	16mm <sup>2</sup> (2*Red/2*Black)	35A*12	≥480Ah
	24V	10mm <sup>2</sup> (2*Red/2*Black)	20A*12	≥240Ah
	48V	6mm <sup>2</sup> (2*Red/2*Black)	10A*12	≥120Ah
4000W	12V	25mm <sup>2</sup> (2*Red/2*Black)	35A*12	≥640Ah
	24V	16mm <sup>2</sup> (2*Red/2*Black)	20A*12	≥320Ah
	48V	10mm <sup>2</sup> (2*Red/2*Black)	10A*12	≥160Ah
5000W	12V	35mm <sup>2</sup> (2*Red/2*Black)	35A*20	≥800Ah
	24V	25mm <sup>2</sup> (2*Red/2*Black)	20A*20	≥400Ah
	48V	16mm <sup>2</sup> (2*Red/2*Black)	10A*20	≥200Ah
6000W	12V	35mm <sup>2</sup> (2*Red/2*Black)	35A*20	≥960Ah
	24V	25mm <sup>2</sup> (2*Red/2*Black)	20A*20	≥480Ah
	48V	16mm <sup>2</sup> (2*Red/2*Black)	10A*20	≥240Ah





